

MGI™ ZIP SERIES

1. To fit the umbrella holder, unscrew the left hand accessory plug from the top handle



2. Insert the steel bolt through the umbrella holder's base and fasten the bolt to the top handle of the buggy. Screw the bolt until firm



3. To fit the drink Holder, line up the connector of the drink holder with accessory plug fastened to the buggy and press down until the drink holder is secure.



MGI™ ZIP SERIES

4. To fit the accessory clip, line up the connector of the clip with the accessory plug fastened to the buggy and press down until the accessory clip is secure



5. To fit the scorecard holder, unscrew the right hand accessory plug from the handle



6. Insert the steel bolt through the scorecard holder's base and fasten the bolt to the top handle of the buggy. Screw the bolt until firm



MGI™ ZIP SERIES

7. To fit the umbrella holder extender, ensure the umbrella block is screwed firm against the inside of the umbrella holder



8. Insert the umbrella holder extender into the umbrella holder and fasten the block against the umbrella holder extender until firm and secure.



9. If you are using an umbrella holder and scorecard holder at the same time, you can still fit other accessories to the buttons fastened to the bots as per the below image

